



# 3 Identification

## 1 MAIN UNIT

BB-1700

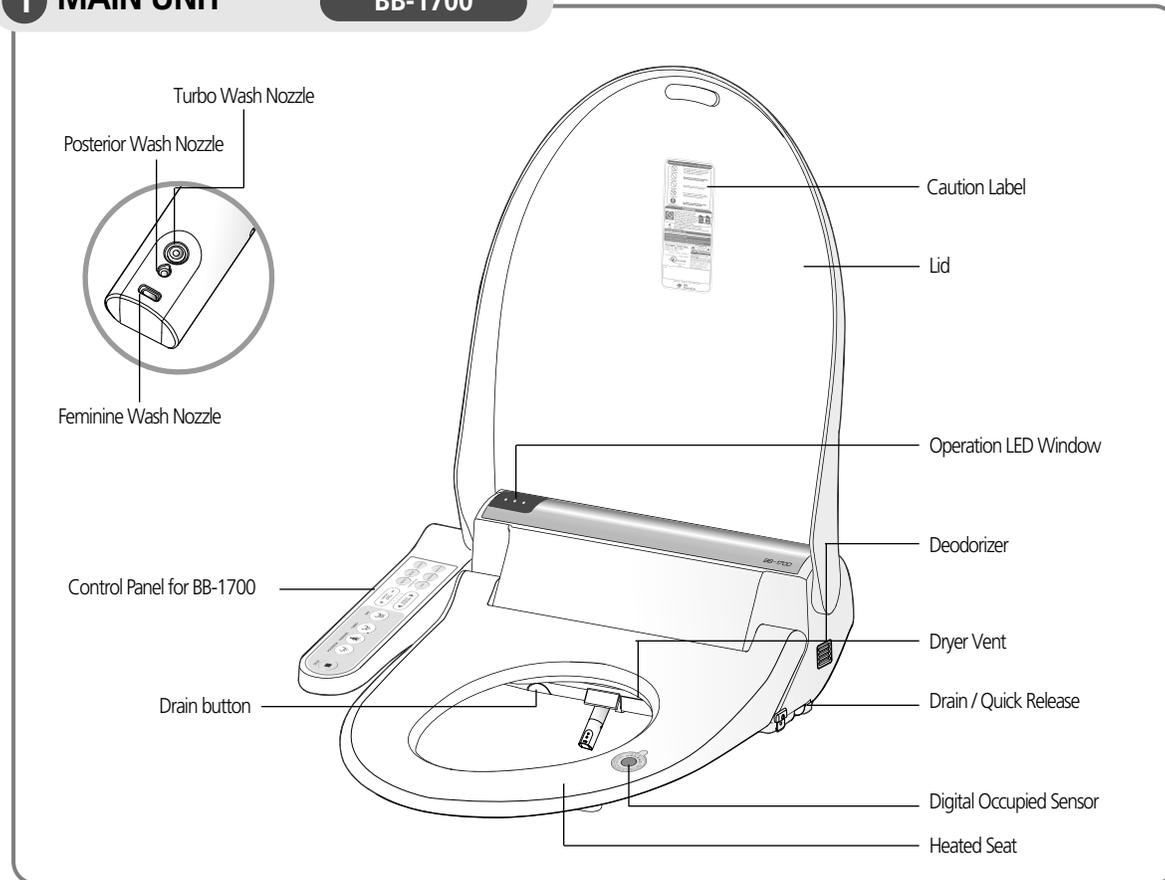



## 3 BB-1700 Control Panel

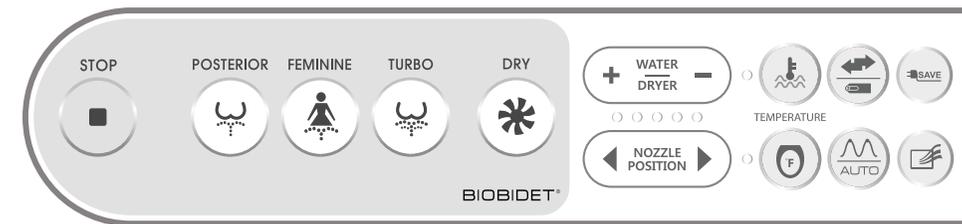


	Stop all operation.		
	Posterior wash.		Feminine wash.
	Turbo wash.		Dry washed area.
	Adjust the water pressure and warm air dryer temperature.		Adjust the oscillation function and nozzle position (5 levels).
	Adjust the water temperature (3 levels).		Adjust the seat temperature (3 levels).
	When selected during the wash function, the nozzle oscillates automatically for a wider wash.		When selected during the wash function, it starts the massage wash.
	If move button is selected when user is not sitting on the seat, it operates nozzle shower function.		If massage function selected when user is not using wash functions, it automatically operates wash and dry function sequentially.
	If Economy mode is selected, seat temperature and water temperature will stay at 89.6°F.		When user sits on the seat, it automatically operates to deodorize. (Can select on/off)

## 2 ACCESSORIES

### For plumbing

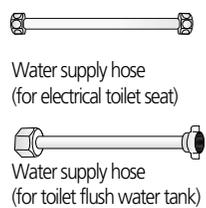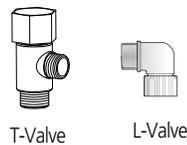

### For product fixation

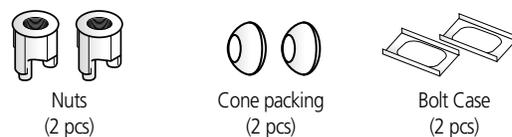

### Installation instructions




- When you sit down on this product, sit in the center in order to activate the sensor.

### 3 Identification


#### 1 MAIN UNIT

BB-2000

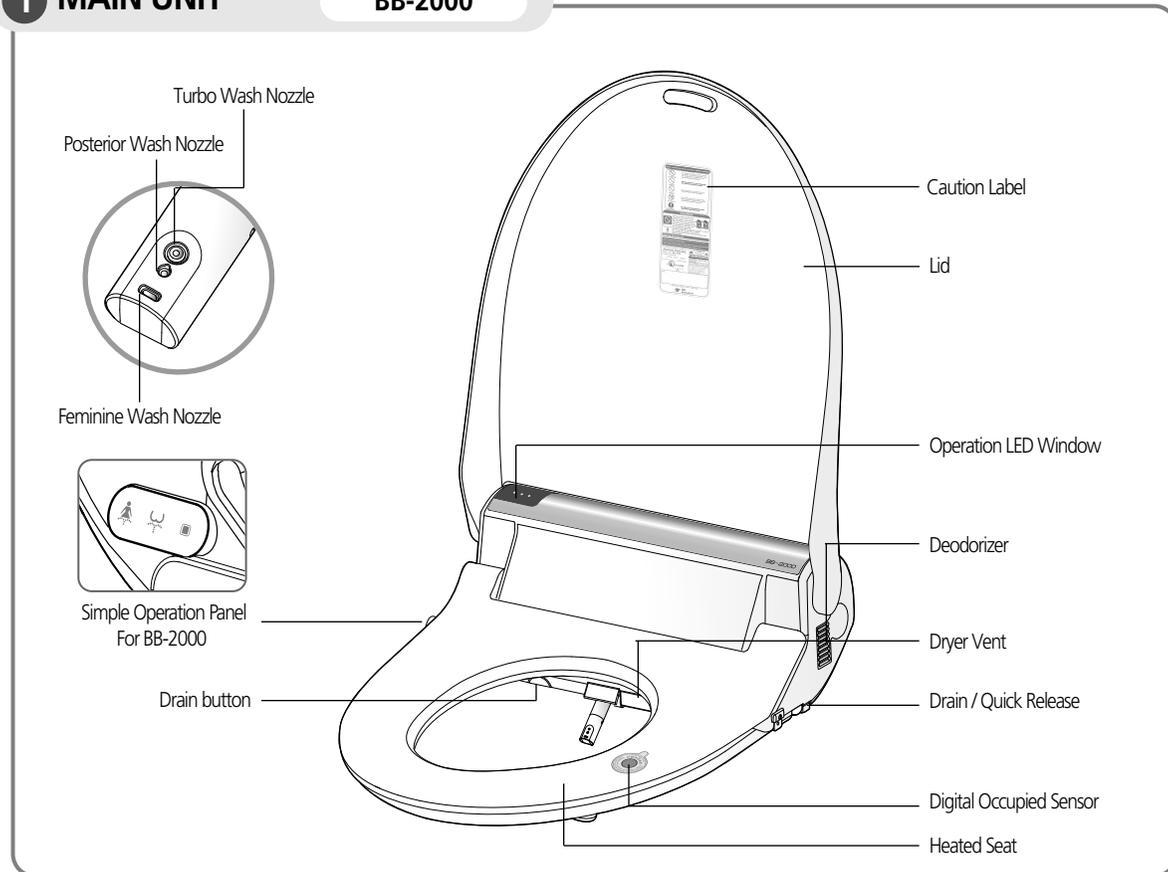


#### 2 ACCESSORIES


##### For plumbing

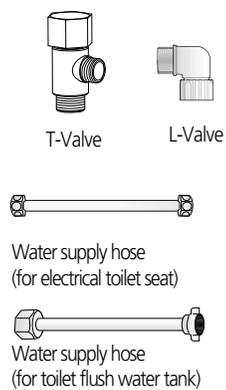

##### For product fixation

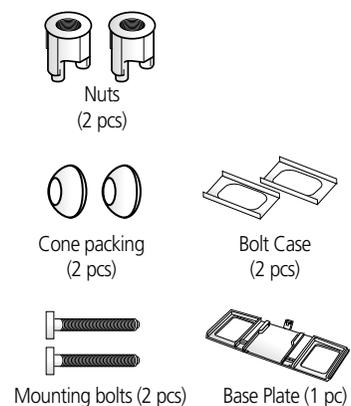

##### For remote control

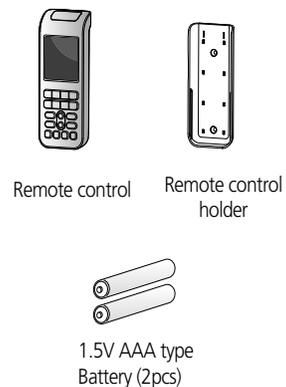

##### Installation instructions




#### 3 BB-2000 Remote Control



	Stop all operation.
	Posterior wash.
	Feminine wash.
	Dry washed area.
	VORTEX wash.
	When selected during wash function nozzle oscillates automatically for a wider wash.
	If move button is selected when user is not sitting on the seat, it operates nozzle shower function.
	When selected during wash function, it start massage wash.
	If massage function selected when user is not using wash functions, it automatically operates wash and dry function sequentially.
	When user sits on the seat, it automatically operates to deodorize. (Can select on/off)
	The water temperature can be adjusted up to 4 levels (off, low, middle, high).
	The seat temperature can be adjusted up to 4 levels (off, low, middle, high).
	Can set time in the remote control with hour( ) and minutes( ) buttons.
	If Economy mode is selected, seat temperature and water temperature will stay at 89.6°F.
	If this( ) symbol flashes, please change the battery in remote control.

#### Simple Operation Panel

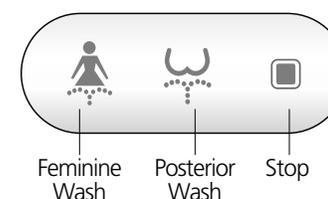

#### Display



1	Posterior Wash	10	Set Seat Temperature
2	Feminine Wash	11	Heated Seat
3	Dry	12	Water Pressure
4	Turbo	13	Dry On / Off
5	Deodorant	14	Set Nozzle position
6	Remote signal intensity	15	Water pressure
7	battery life	16	Nozzle position
8	Set Water Temperature		
9	Heated Water		

- When you sit down on this product, sit in the center in order to activate the sensor.