

# QuickDrain QuickFit Spacers



**BASE BLOCK**




**SPACER BLOCKS**



**READY TO ASSEMBLE**



**GLUED TOGETHER W/PVC GLUE**

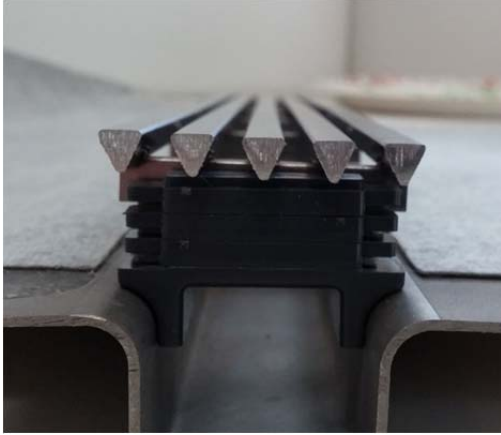

**SPACER SNAPPED IN DRAIN**



**COSMO COVER W/SPACER**

### **QuickDrain USA - Stackable Spacer Instructions**

QuickFit Spacers are used to hold the drain cover even with the finished floor. Each package contains one base block and enough spacer blocks to adjust the drain cover from  $\frac{1}{2}$ " to  $\frac{7}{8}$ " above the drain body. However, if you need to raise the top of the cover to a height greater than  $\frac{7}{8}$ " from the top of the drain body, you must use one of the four stainless steel spacers offered, (1", 1.5", 1.75" or 2.5").

**Items needed:** QuickDrain USA QuickFit Spacers & PVC Cement

1. Remove the base spacer and the eight  $\frac{1}{8}$ " spacer inserts from the bag.
2. Press a base block into the drain body. You can "test fit" the drain cover as you add spacer blocks to the base.
3. Press one insert on each side to make a "flush/even" height and continue to add and press inserts until you reach the height needed.
4. Disassemble the spacers and apply PVC Cement to each one as you reassemble into a permanent one-piece spacer to the height needed.
5. Press the spacers onto the attachment points on the bottom of the drain cover, placing one on each end and spacing them evenly along the length of the cover.

Should you need further clarification, please contact our **Technical Support Team** at 866-998-6685 or 970-668-0805.