

TOOLS/SUPPLIES NEEDED

(2) Alcohol Wipes (included)
E-6000 Adhesive (included)
Pencil
Scissors or Razor Knife
Straight Edge



WATERSTOPPER

INSTALLATION INSTRUCTIONS

Make sure the surface is clean and dry.

NOTE: Adhesion may be poor on surfaces (tile) treated with silicone based sealers. Test by peeling back about 1" of liner, press adhesive area to surface it will be installed on and leave overnight. Test adhesion by pushing sideways as shown.



Apply some silicone in grout gap first as needed.

If adhesion is satisfactory, pull straight up and proceed with the installation.
If not, surface preparation auto body wax and grease remover will be necessary.

1



Clean surface with supplied alcohol wipe (MUST BE DRY)

2




Without removing adhesive liner, place endcap LEVEL at the curb edge and inside the shower front.

Note the distance from the front of the shower for second endcap.




3

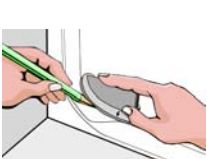


Draw the outline of the endcap on shower.

4

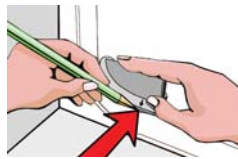

Mark on the floor at the embossed arrow.


5

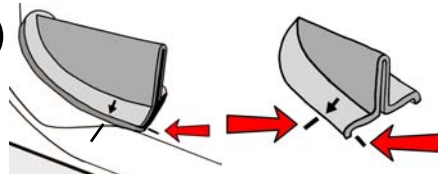

Mark on the floor at the edge of the underside indent at the open end of the endcap.


Repeat steps 2 through 5 with the second endcap at the other side of the shower

6

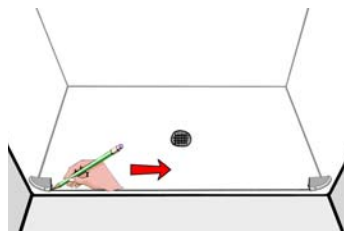

Draw a line with a straight edge that connects the two marks from step 5.

7

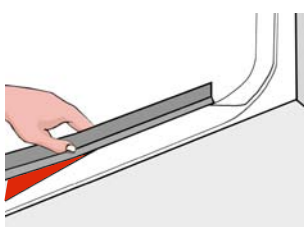


Peel off about 4 inches of the adhesive backing and stick the corner at the two intersecting marks.

8



Using the line as your guide, continue to peel the liner as you gently stretch the material and stick the WaterStopper along the line.


9

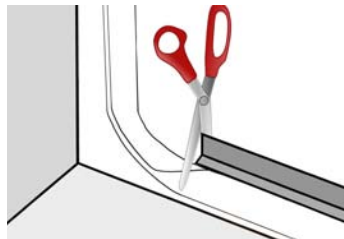

When you reach the arrow mark at the other end, cut off any excess material and firmly press the end to the floor.


Move along the length pressing firmly down on both sides of the WaterStopper.

10

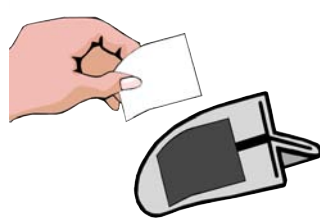


Peel the liner off the self-adhesive tape on the endcaps.

11

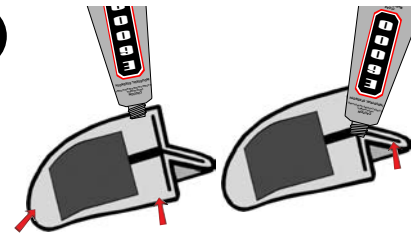


Apply E-6000 adhesive on the edge around the bottom and inside the front slot.

12

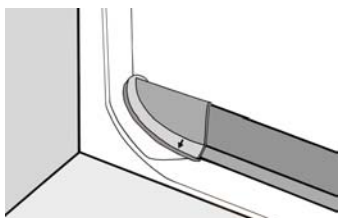

Stick the endcaps inside the the drawn outline. Make sure the upright rubber is slotted properly in the endcap.

Wipe off any excess E-6000 adhesive and pencil marks with the other alcohol wipe

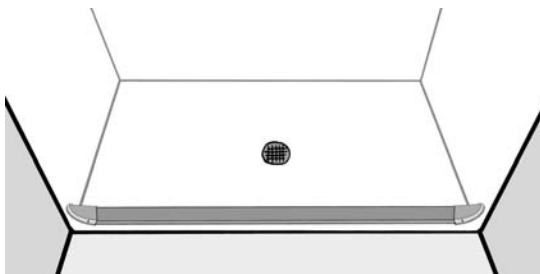


The WaterStopper will be ready for use after four hours. The WaterStopper used with a heavy duty, weighted curtain offers the best water retention system available.


Best Bath
SYSTEMS
www.best-bath.com

CORNER INSTALLATION SUPPLEMENT


WATERSTOPPER

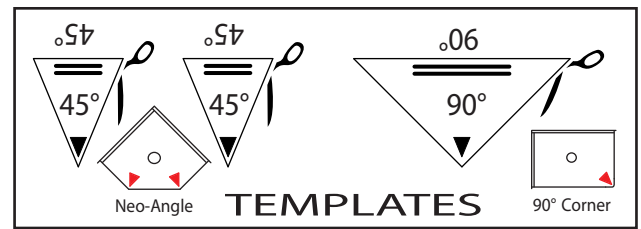


Refer to steps 1 through 6 on the WaterStopper Installation Instructions to begin

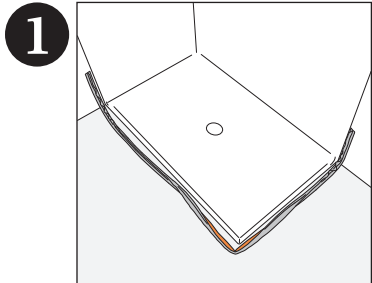


1 Lay the WaterStopper along the front of your shower leaving equal excess at each end.

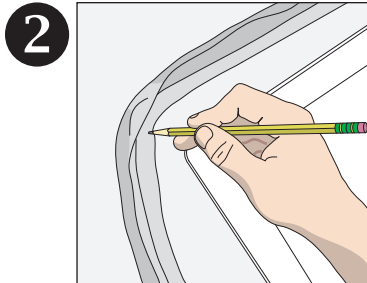


2 Mark the WaterStopper nearest the corner with a pencil.

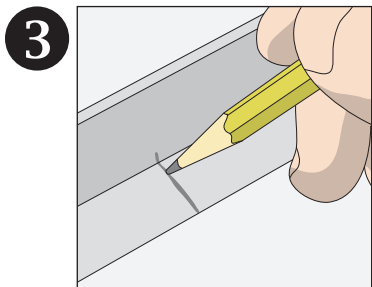


3 Extend your pencil mark up and onto the vertical surface.

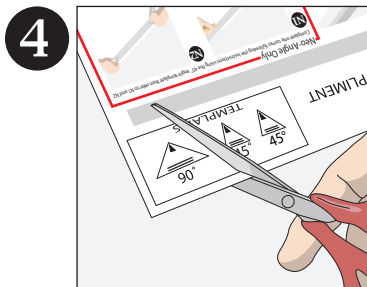


4 Cut out the template top-left corner of this page to match the angle of your shower.

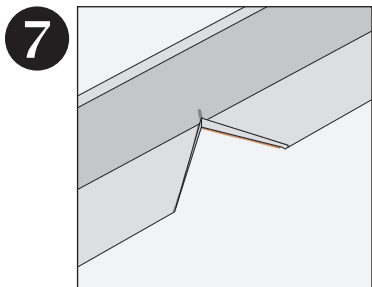


5 This is an example of a cut for a 90° corner shower.

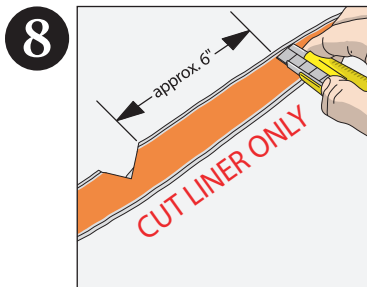

6 Slice the liner about 6" on either side of the cut-out.
NOTE: DO NOT CUT THROUGH THE ADHESIVE STRIP OR THE RUBBER

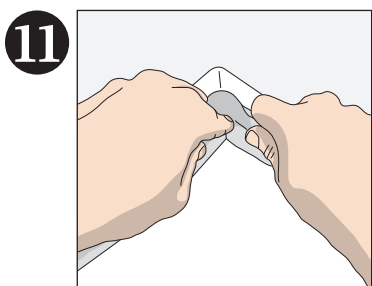

7 With one finger or thumb in the inside pit of the cut, press the WaterStopper down onto the shower.

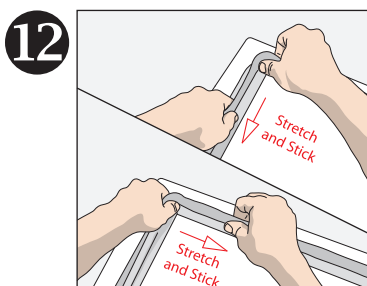


8 With the center cut pressed down with one hand, use the other to stretch tight and stick the exposed section of the adhesive down to the corner of your shower.


Neo-Angle Only
Complete one corner following the instructions using the 45° angle template then refer to N1 and N2

N1


N2

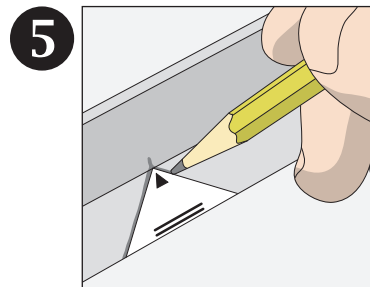


9 Remove this section of the liner.

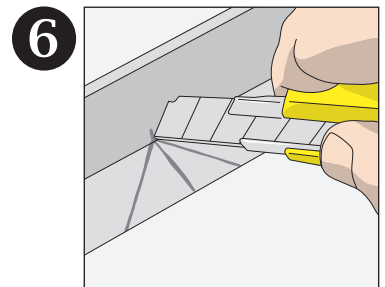

10 Bend the WaterStopper to your angle. Make sure that the outer edge curls up rather than down.

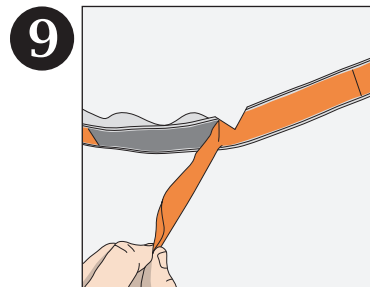

11 Run your thumbs or fingers along the outside bend sticking the curled-up section down.

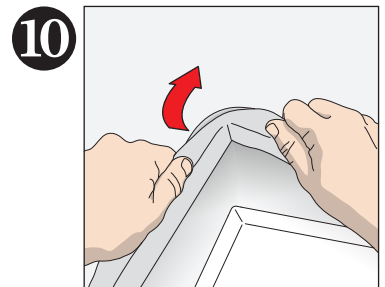

12 Your corner is finished. Continue with steps 9 through 11 on the reverse side to complete installation.