



Job Name		Item #
Engineer	Contractor	
P0 #	Tag	
Representative		

## **DESCRIPTION**


- Spacers are used to set the correct distance between the drain flange and the top of the drain cover. This is the same distance as from the waterproofing to top of the finished flooring material
- Total height of spacer and cover from top of drain flange is 7/8"
- Spacers are required with all PLO models

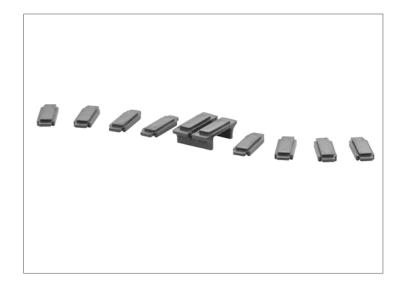



## **DRAIN ASSEMBLY**

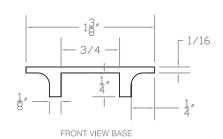


FRONT VIEW EXTENSION

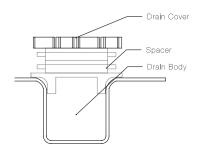

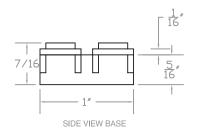





SIDE VIEW EXTENSION



